

**Instructions for use of
the EP210 two hole electric punch**

- Remove punch and power supply from box.
- Connect the 9VDC 1200mA power supply to the hole punch (in the back of the machine)
- Connect power supply to the wall outlet
- Adjust paper guide to desired location by pulling guide to the left
- Insert up to 10 sheets of 20# paper or equivalent into paper punch
- Paper punch is automatically activated
- Remove paper after punching is complete
- In the event of a jam, push reverse button on back of machine (marked "PUSH")