

REVISED

7:41 am, Mar 06, 2009


← Use A1N for serial
#NM

← Use A9B

Use A1N for serial
#NM



Use A9B

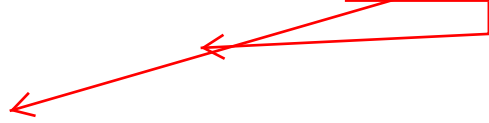

hold's to machine



← Use B1N for Serial #'s NM

← comes w/B12


← B16 roller only B16 complete
← comes w/B16

← should use B16C

← comes w/B29

B16 roller only
B16C complete



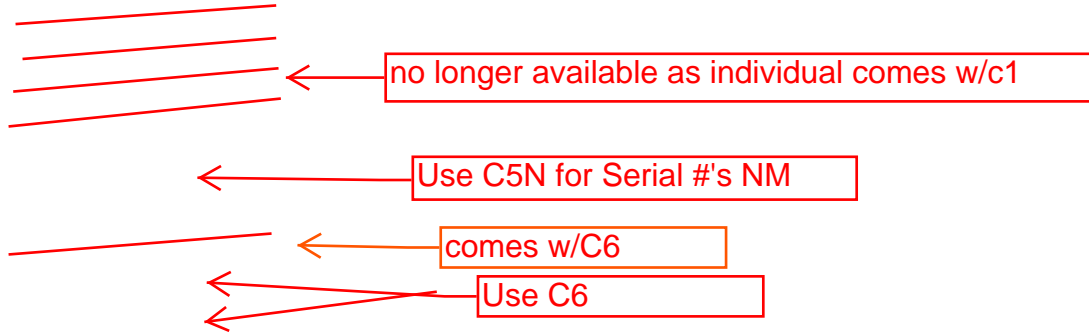

No longer available
on its own comes
w/c1




Use D1N for Serial #'s NM



Use J19



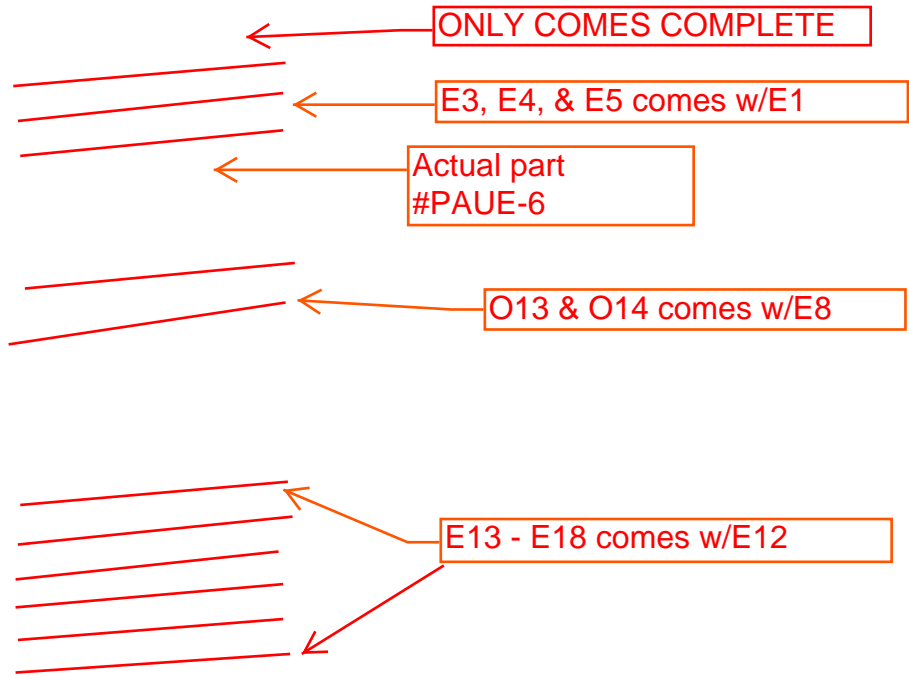

Comes Complete
only



← F1N for Serial #'s NM

use F3 for Serial
#'s M101001-
M101040
Use F3N for
Serial#'s M101327
UP



← I2 comes w/I1


use
P4 ←

O6 comes w/J15





Comes w/D12



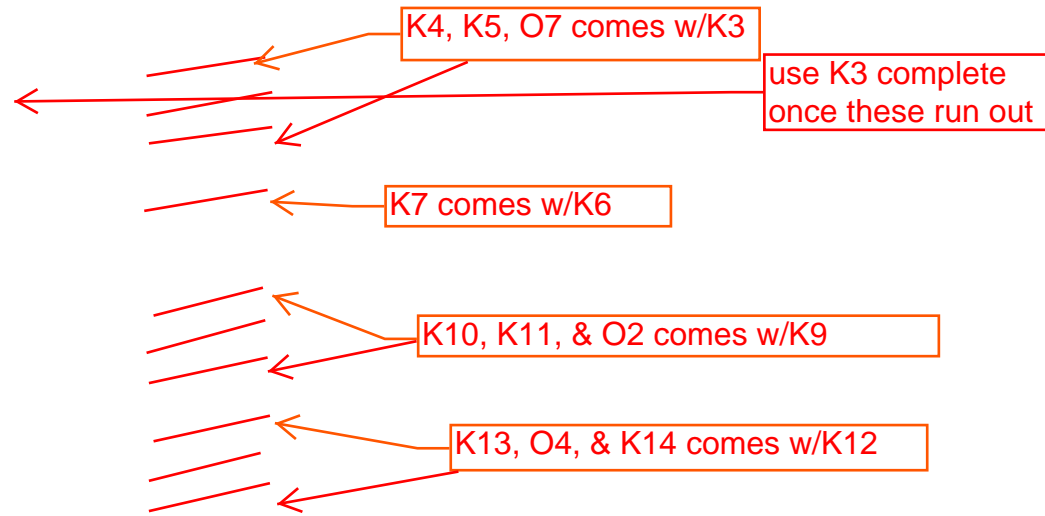



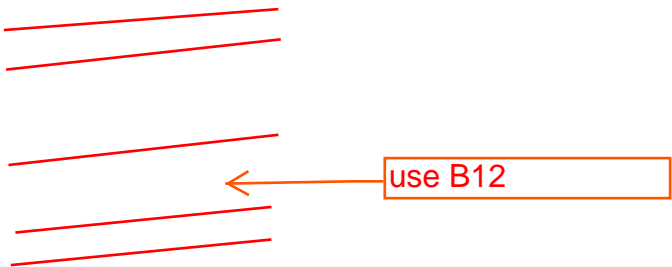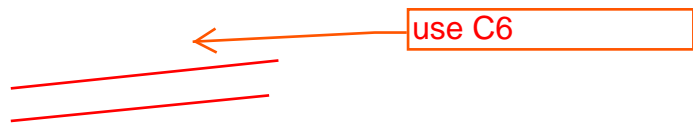

B22 Screws



B54N Stopper
Plate

